



Quick Reference Guide




Parts Descriptions

Personal Phone

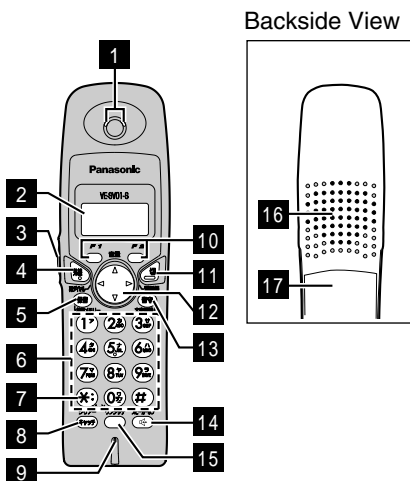

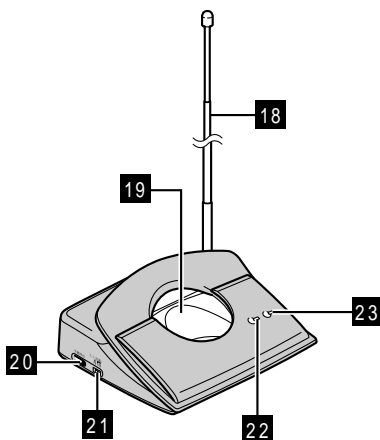Base Unit





- 1 Earpiece
- 2 Liquid crystal display
- 3 Volume control button
- 4 Send/Answer button & indicator
- 5 Hold/Caller ID button
- 6 Numeral/Character buttons
- 7 Tone button (to switch to DTMF tone)
- 8 Flash/Clear button
- 9 Microphone
- 10 Multi-operation buttons
- 11 Off button
- 12 Redial button ()
- Phone book button ()
- Volume control buttons ()
- 13 Auto Answer/Character Input Mode button
- 14 Speakerphone button & indicator
- 15 One-touch Dial button
- 16 Speaker
- 17 Battery cover
- 18 Antenna
- 19 Charger
- 20 Page button
- 21 Tone/Pulse switch
- 22 In Use indicator
- 23 Auto answer indicator

本機は日本国内用です。国外での使用に対するサービスは致しかねます。
 This product is designed for use in Japan.
 Panasonic cannot provide service for this product if used outside Japan.



Basic Operations

To make a call

Lift the personal phone from the base unit and press  (4).

→ Dial.....To end the call, place the personal phone on the base unit or press  (11).

To receive a call

When the phone rings... → Lift the personal phone from the base unit or press . → Talk.....To end the call, place the personal phone on the base unit or press .

To place the current call on hold



Press  (5) during a call.

To retrieve the held call


Press  or .

To use TAM



(Telephone Answering Machine)


When you leave home, press  (13) . (The Auto answer indicator (23) on the base unit turns on.)

→ When receiving a call while TAM is activated, it answers the call automatically in Japanese, and records the incoming messages. Then, the Auto answer indicator on the base unit starts flashing.

→ When you return home, press  0 to play back the messages.



The Auto answer indicator turns off and the answering mode is deactivated.

After playing back the messages, press  to erase the messages or press  to keep the messages.



To play back the message while TAM is deactivated, press  4.


*Up to 50 messages can be recorded for approx. 18 minutes in total.

To make a call using the speakerphone (Hands-free talk)

Press  (14). → Dial. → Talk to the microphone.....To end the call, place the personal phone on the base unit or press .

To receive a call with the speakerphone (Hands-free talk)

When the phone rings... → With the personal phone placed on the base unit, press  or .

→ Talk to the microphone.....To end the call, press .


To hear recorded messages while away from home (Remote control)



Preparation before you leave home

Store a remote control number.

Press   0 0 6.

→ Enter the desired 4-digit number.

→ Press .

When you leave home, press  . (The Auto answer indicator on the base unit turns on.)

To hear messages

Dial your home phone number. → While the outgoing message is played back...

→ Enter your remote control number.

→ Announcement → Press 2.

→ You will hear recorded messages if any.

NOTE

This operation can be made only from telephones which can send DTMF signals.

The number after the button shows the location of the button described in the previous page.